


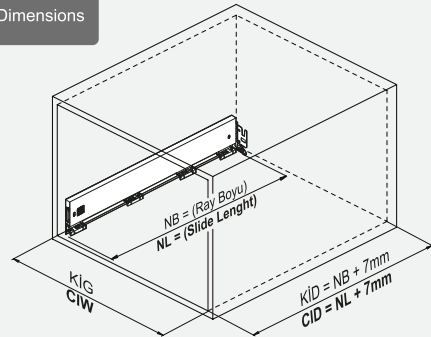


Cabinet Dimensions




Rayların Vida Konum Ölçüleri Screw Location for The Slides


Rayı işaretlenmiş deliklerden vidalayınız.
Screw the slide from marked holes.

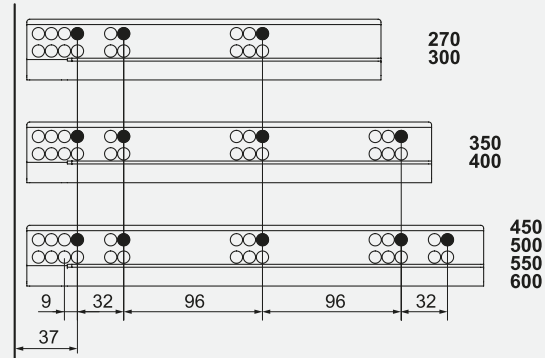

Bas - Aç Ray Ayarı Push - Open Slide Adjustment

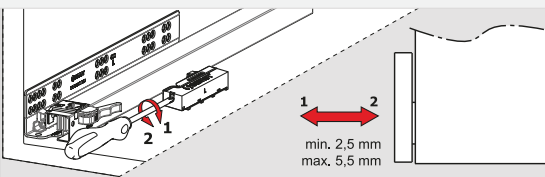

Front Panel

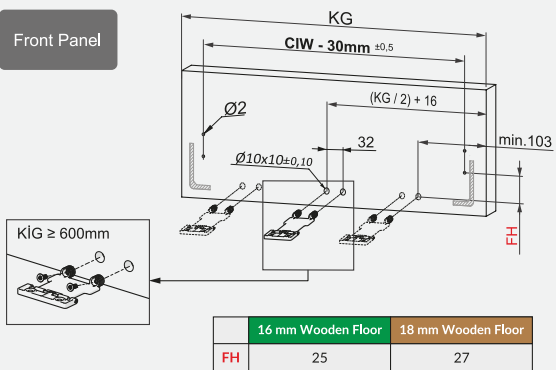


CIW : Cabinet Internal Width
CID : Cabinet Internal Depth
NL : Nominal Length
KG : Front Panel Width
B : Front Panel Side Overlay
X : Front Panel Bottom Overlay

Recommended Screw and Templates



Slide Mounting Dimension

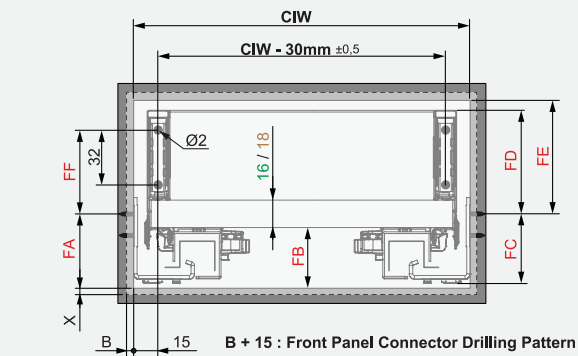

16 mm Wooden Floor Application


	SC		PO - YBA	
	H.106	H.138	H.106	H.138
FA	41		43	
FB	34		36	
FC	39		42	
FD	67	99	67	99
FE	71	103	71	103
FF	50		50	

18 mm Wooden Floor Application


	SC		PO - YBA	
	H.106	H.138	H.106	H.138
FA	41		43	
FB	34		36	
FC	39		42	
FD	69	101	69	101
FE	73	105	73	105
FF	52		52	

SC : Soft Close Slide
PO : Push-Open Slide
YBA : Push-Open Soft Close Slide


Wooden Drawer Floor

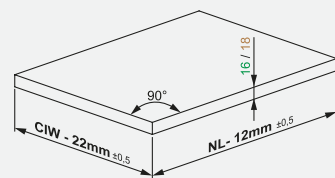


Wooden Backboard

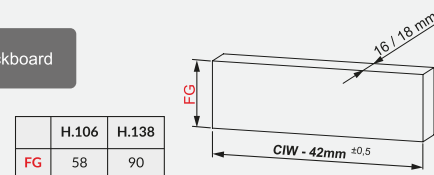

Montaj / Assembly

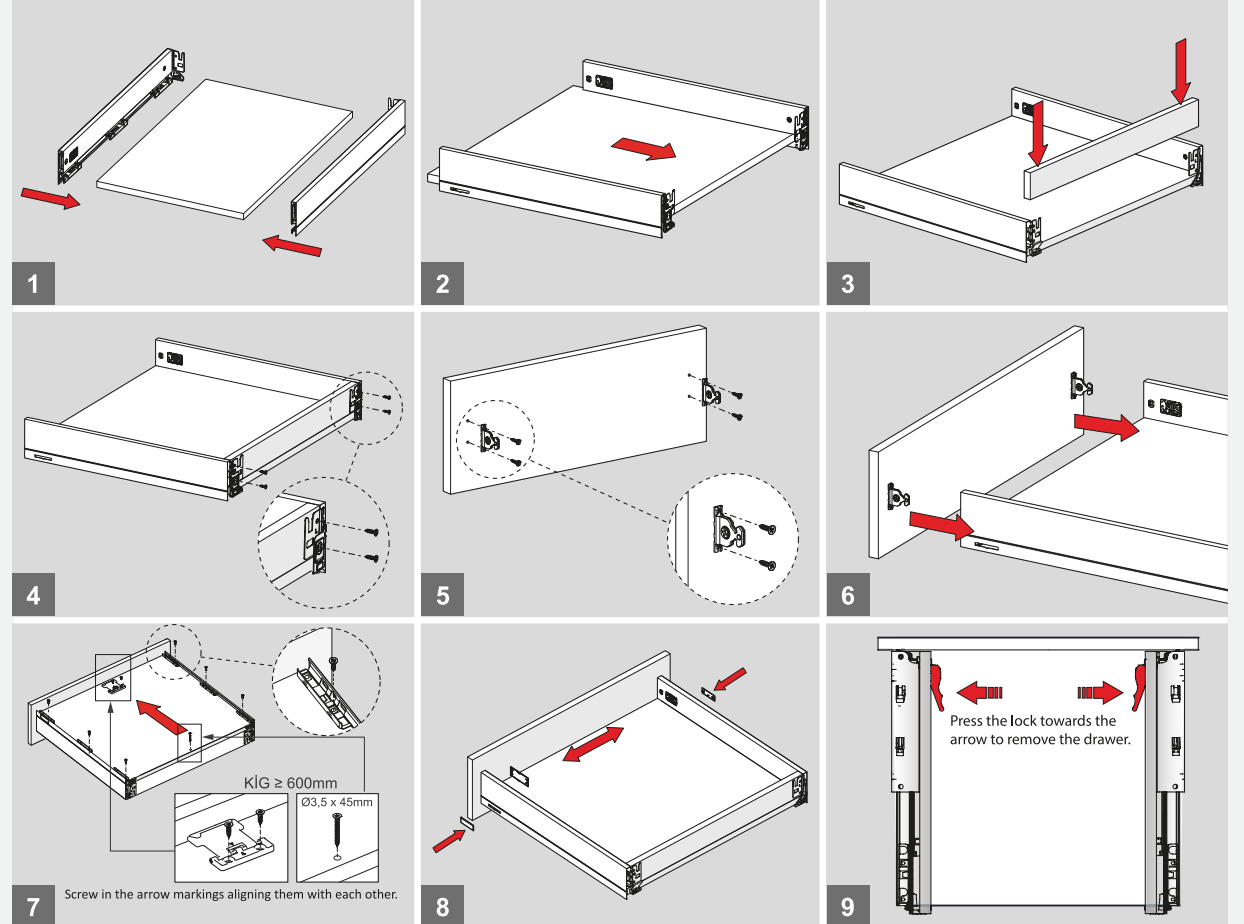

Adjustment

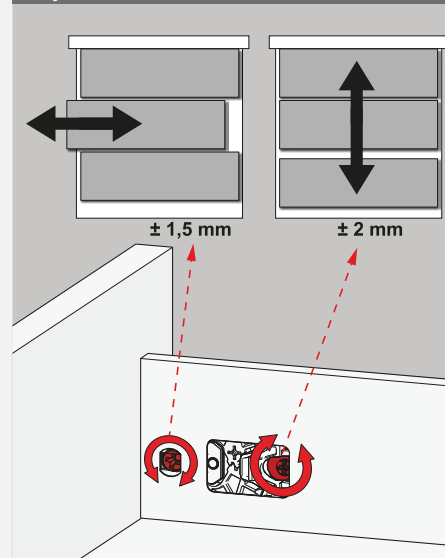

Important

