

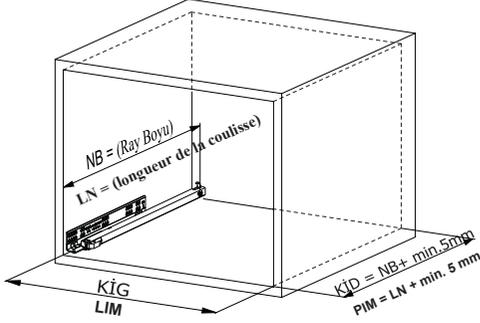


Kabin Ölçüleri
Dimensions du meuble

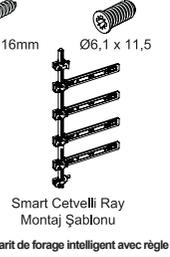





Kabin İç Genişliği	: KİG	Largueur intérieure du meuble	: LIM
Kabin İç Derinliği	: KİD	Profondeur intérieure du meuble	: PİM
Çekmece Derinliği	: ÇD	Profondeur du tiroir	: PT
Çekmece İç Genişliği	: ÇİG	Largueur intérieure du tiroir	: LIT
Nominal Boy (Ray boyu): NB		Longueur nominale	: LN

Tavsiye Edilen Vida ve Şablonlar
Vis et modèles recommandés





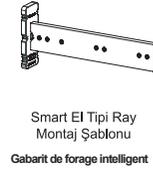


Rayların Vida Konum Ölçüleri
Emplacement des vis des coulisses


Rayı, koyu renk ile işaretlenmiş deliklerden vidalayınız.
Vissez la coulisse dans les trous correspondants.

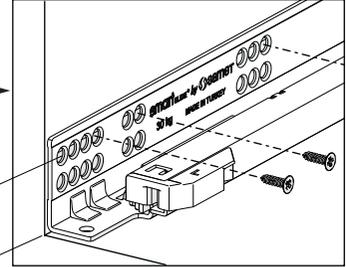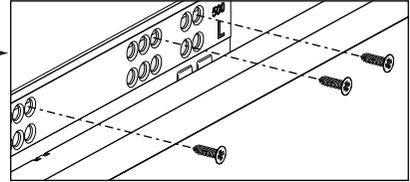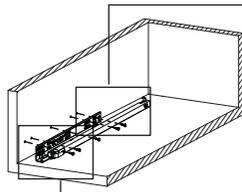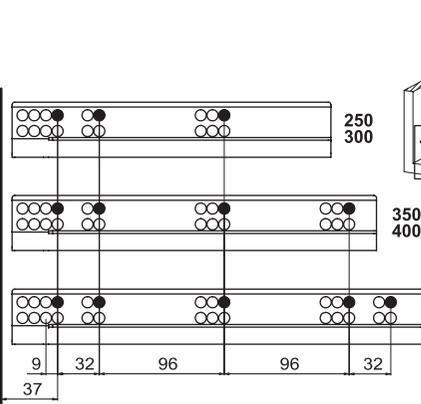

Çekmece Ölçüleri
Dimensions du tiroir

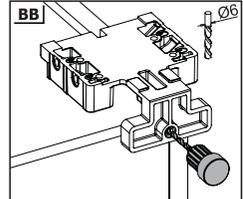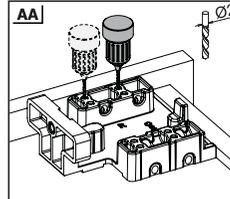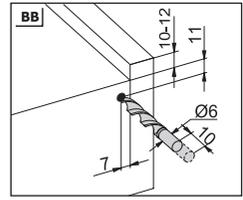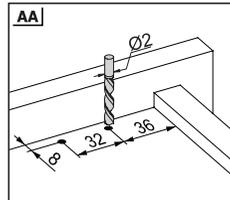
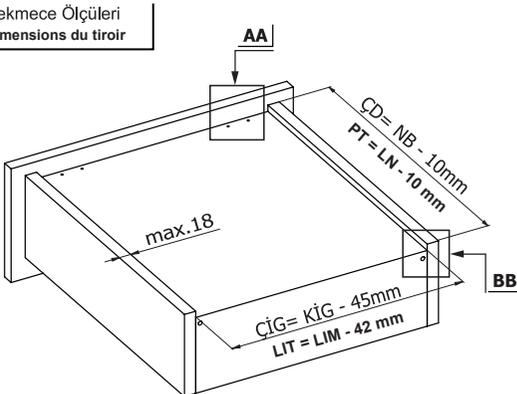


1

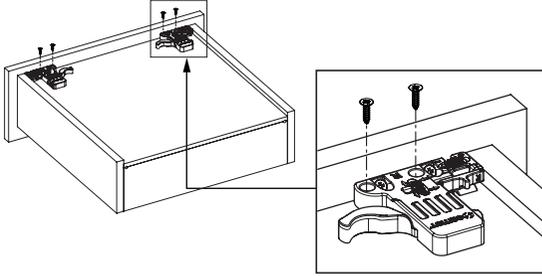


Not: Çekmece taban kalınlığı 12 mm'den küçük olduğunda, açılı mandal bağlama deliklerini kullanınız.

Remarque : Utilisez les trous obliques pour monter la serrure intelligente si la largeur de la planche de bois est inférieure à 12 mm.

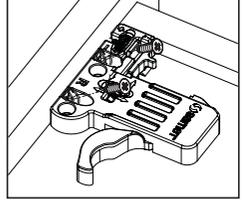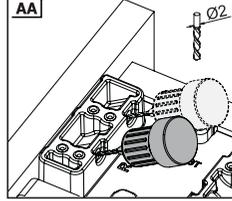


2

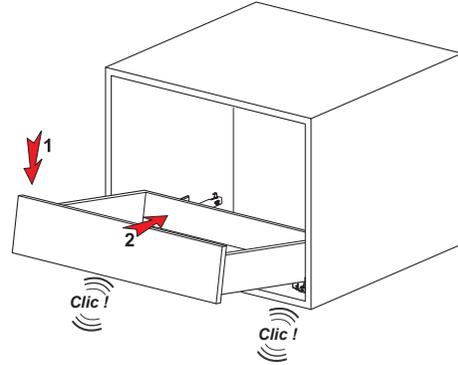

3

Somunu çevirerek, yukarıya doğru ayar yapabilirsiniz.

Vous pouvez régler le positionnement vertical en tournant le bouton.

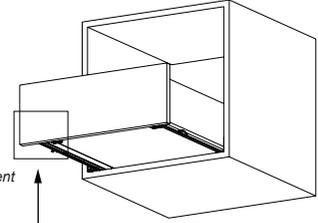


Somunu çevirerek, sağ-sol ayarını yapabilirsiniz.

Vous pouvez régler le positionnement gauche-droite en tournant le bouton.

Mandal kollarına aynı anda basarak, çekmeceyi kolayca yerinden çıkarabilirsiniz.

Vous pouvez facilement sortir le tiroir en appuyant simplement sur le loquet smart lock



Smart El Tipi Ray
Montaj Şablonu
Gabarit de forage intelligent




Kod / Code

12799902

12799904

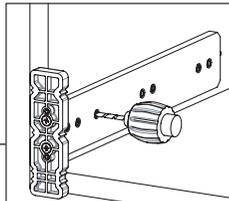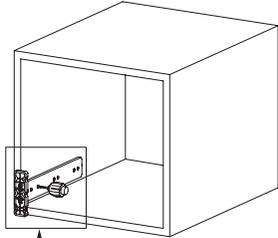

Smart Cetveli Ray
Montaj Şablonu
Gabarit de forage intelligent avec règle



Kod / Code

12799901

12799905

